



SB100 DESCALE INSTRUCTIONS

⚠ WARNING - DO NOT LEAVE THE BREWER UNATTENDED DURING THIS PROCEDURE

1.

SWITCH OFF BREWER AND DISCONNECT FROM MAINS

2.

REMOVE LID AND CUP STAND

3.

WHEN RINSING AND DRAINING ENSURE THE MESH FILTER IS FITTED TO PREVENT LOOSE SCALE FROM ENTERING PIPEWORK AND PUMP

EMPTY CONTENTS OF BREWER INTO SINK

⚠ WARNING - WATER MAY BE HOT

4.

FILL WITH COLD WATER TO MAXIMUM FILL LINE

5.

CONNECT DESCALE TUBING INTO FILTERPACK HOLDER

6.

CLOSE FILTERPACK HOLDER

DO NOT PRESS START BUTTON AT THIS STAGE

7a.

CONNECT TUBING INSIDE TANK AND SLOWLY ADD DESCALANT

7b. Recommended Descale Notes

FLAVIA RECOMMEND RENEGITE (MANUFACTURED BY BRAVILOR BONAMAT) ALTERNATIVELY USE A DESCALANT AVAILABLE FROM ANY SUPERMARKET OR DIY STORE SUCH AS 'SCALEAWAY' OR 'OZ' DESCALERS.

A descale kit with instructions is available from FLAVIA Customer Service. Please use the 'Contact Us' form, located in the Customer Service Section of www.flavia.net.

NOTE: WITH THE ABOVE ALTERNATIVE DESCALANTS, THIS PROCESS MAY HAVE TO BE FOLLOWED 2 OR 3 TIMES TO SUCCESSFULLY DESCALE YOUR BREWER.

8.

RE-FIT AND LOWER LID. DO NOT CLOSE

9.

PRESS AND HOLD RIGHT HAND ARROW, BUTTON AND SWITCH ON BREWER

10.

WHILST HOLDING RIGHT HAND ARROW BUTTON PRESS LEFT HAND ARROW BUTTON

11.

IF THE TWO RED LIGHTS DO NOT FLASH AS SHOWN, SWITCH OFF MACHINE FOR MINIMUM OF 10 SECONDS AND REPEAT STEPS 9 & 10. TWO FLASHING RED LIGHTS INDICATE THE PROCESS HAS STARTED. AFTER 40 MINUTES ONE LIGHT WILL CHANGE TO GREEN.

12.

PRESS START BUTTON TO CIRCULATE SOLUTION FOR TEN MINUTES

13.

A THIRD FLASHING GREEN LIGHT INDICATES THE SOLUTION IS CIRCULATING

14.

PRESS AND RELEASE START BUTTON TO ABORT CYCLE

15.

WHEN CIRCULATION HAS STOPPED, DO NOT SWITCH OFF MACHINE. CHECK ALL SCALE HAS BEEN REMOVED. IF NECESSARY, CLOSE PACK DOOR AND PRESS START BUTTON TO RESTART CIRCULATION, THIS MAY BE REPEATED AS MANY TIMES AS REQUIRED.

WHEN ALL SCALE HAS BEEN REMOVED, EITHER DISCONNECT THE TUBING FROM INSIDE THE TANK (FIG.7A) AND PRESS THE START BUTTON TO EMPTY TANK INTO A BUCKET OR SINK, OR, SWITCH OFF AND DISCONNECT FROM MAINS AND POUR AWAY. IN ANY EVENT SWITCH OFF MACHINE FOR AT LEAST 10 SECONDS, FILL WITH COLD WATER AND REPEAT FROM 9 ABOVE

CAUTION: The use of other descalants other than those specified may cause damage to your brewer - please read and follow manufacturers instructions at all times.

PLEASE NOTE: DESCALE TUBING IS REUSABLE